

Gigaset

SL780

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Brief overview



- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 16)
- 3 **Display keys** (→ page 19)
- 4 **Message key** (→ page 37)
Access to calls and message lists;
Flashes: new message or new call
- 5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
Keypad lock on/off (press and hold in idle status);
toggles between upper/lower case and digits
- 7 **Call-by-call list key** (→ page 32)
Open call-by-call list
- 8 **Charging socket**
- 9 **Microphone**
- 10 **Recall key**
- Consultation call (flash)
- Insert a dialling pause (press and hold)
- 11 **Star key**
Ring tone on/off (press and hold);
with an open connection: switch between dial pulsing/touch tone dialling (press briefly);
Text input: Open table of special characters
- 12 **Key 1**
Network mailbox (press and hold)
- 13 **Talk key**
Accept a call; open redial list (press briefly);
start dialling (press and hold)
When writing an SMS: send SMS
- 14 **Speaker key**
Switch between earpiece and speaker mode;
Lights up: speaker activated;
Flashes: incoming call
- 15 **Control key** (→ page 18)
- 16 **Signal strength** (→ page 16)





Base



Registration/
Paging key
(→ page 52)

Display symbols

The following symbols are displayed independently from the settings and the operating status of your telephone:

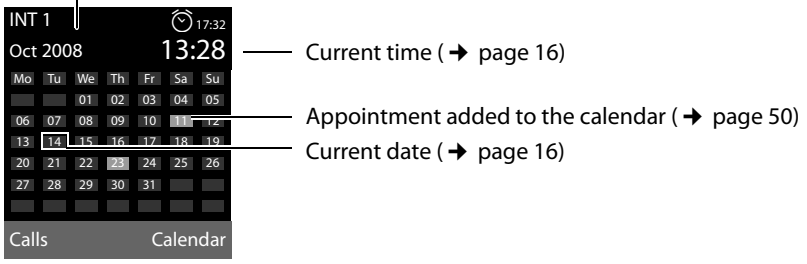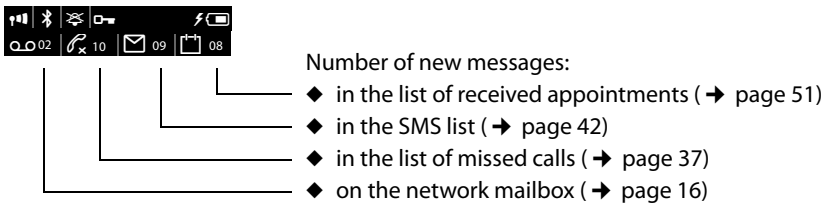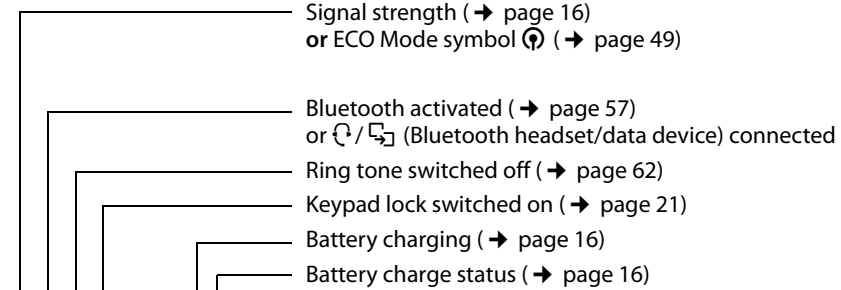


Signalling

External call (→ page 27)



Alarm clock (→ page 52)



Internal call (→ page 53)



Appointment (→ page 50) / Anniversary (→ page 35)



Contents

Brief overview	1
Display symbols	2
Safety precautions	6
Gigaset SL780 – more than just a telephone	7
First steps	8
Check the pack contents	8
Connecting the base	9
Installing the base and charging cradle	10
Setting up the handset for use	11
Setting the date and time	14
Connecting the USB data cable	16
What would you like to do next?	17
Using the phone	18
Control key	18
Display keys	19
Keys on the keypad	19
Correcting incorrect entries	19
Menu guidance	20
Activating/deactivating the handset	21
Activating/deactivating the keypad lock	21
Illustration of operating steps in the user guide	22
Menu tree	24
Making calls	27
Making an external call	27
Ending a call	27
Accepting a call	27
Calling Line Identification	27
Speaker talking	28
Switch to mute	28
Making calls using network services	29
Ringback	29
Call waiting during an external call	29
Call divert (CD)	30
Consultation call, toggling, conference	30
Further functions	31

- Using the directory and lists 32**
- Directory/call-by-call list 32
- Redial list 36
- Incoming SMS message list 36
- Call lists 36
- Opening lists with the message key 37
- Making cost-effective calls 38**
- Linking call-by-call numbers with one number 38
- Automatic network provider code (preselection) 38
- SMS (text messages) 40**
- Writing/sending an SMS 40
- Receiving an SMS 42
- SMS with vCard 43
- Notification by SMS 44
- SMS mailboxes 44
- Setting SMS centres 45
- SMS services 46
- SMS on a PABX 46
- Activating/deactivating first ring tone muting 46
- Activating/deactivating SMS function 47
- SMS troubleshooting 47
- Using the network mailbox 48**
- Configuring fast access for the network mailbox 48
- Viewing the network mailbox message 48
- ECO DECT 49**
- Setting an appointment (calendar) 50**
- Displaying missed appointments, anniversaries 51
- Setting the alarm clock 52**
- Using several handsets 52**
- Registering handsets 52
- De-registering handsets 53
- Locating a handset ("paging") 53
- Changing the base 53
- Making internal calls 53
- Listening in to an external call 54
- Changing the name of a handset 55
- Changing a handset's internal number 55
- Using a handset as a room monitor 55**
- Using Bluetooth devices 57**

Handset settings	59
Quick access to functions and numbers	59
Changing the display language	60
Setting the display	60
Activating/deactivating auto answer	60
Changing the speaker/earpiece volume	61
Changing ring tones	61
Resource directory	62
Activating/deactivating advisory tones	63
Setting your own area code	64
Restoring the handset default settings	64
Base settings	64
Protecting against unauthorised access	64
Activating/deactivating music on hold	65
Repeater support	65
Restoring the base to the factory settings	65
Connecting the base to the PABX	66
Dialling modes and recall	66
Saving an access code (outside line code)	66
Setting pauses	66
Switching temporarily to touch tone dialling (DTMF)	67
Customer Service & Assistance	68
Questions and answers	69
Authorisation	70
Guarantee Certificate	70
Environment	71
Appendix	72
Caring for your telephone	72
Contact with liquid	72
Specifications	72
Writing and editing text	73
Additional functions via the PC interface	74
Accessories	76
Mounting the base to the wall	78
Index	79

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Only use the **recommended, rechargeable batteries** (→ page 72) as this could otherwise result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the speaker function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base or charging cradle in bathrooms or shower rooms. The base and charging cradle are not splashproof (→ page 72).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

Please note

Not all of the functions described in this user guide are available in all countries.

Gigaset SL780 – more than just a telephone

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are unique, providing you with first-class voice quality in speaker mode, while the various ports (Bluetooth, USB) offer you high flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

It can do a whole lot more:

- ◆ You can use Bluetooth™ for wireless communication with other devices (e.g. headsets) that also use this technology.
- ◆ Synchronise your address books on your telephone, mobile phone and PC with Bluetooth™ or via the USB port using the Gigaset QuickSync software.
- ◆ You can save appointments and anniversaries in your phone and it will remind you of them in advance.
- ◆ You can designate important people as VIPs so you can identify important calls from the ring tone.
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient. VIP calls will still be connected.
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. For more information, see www.gigaset.com/servcce.

You can find additional information on your telephone at www.gigaset.com/gigasetsl78h.

Have fun using your new phone!

First steps

Check the pack contents



- 1 one Gigaset SL780 base
- 2 one base cover stand
- 3 one mains adapter for the base
- 4 one Gigaset SL78H handset
- 5 one battery
- 6 one battery cover
- 7 one belt clip
- 8 one charging cradle with mains adapter
- 9 one phone cord
- 10 one user guide

Connecting the base

- ▶ Connect the mains adapter **1** and phone jack **2** to the base and place the cables in the cable recesses.



- ▶ Place the cover in the notches on the back of the base and click into place (not if mounting on the wall).

- ▶ **First** connect the phone jack **4**.
- ▶ **Then** connect the mains adapter **3**.



Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 73).

Installing the base and charging cradle

The base and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C.

- ▶ Install the base on a level, non-slip surface in a central location in your house or flat or mount the base on the wall → page 78.

Please note

Pay attention to the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings.

The range is reduced when Eco Mode (→ page 49) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Setting up the handset for use

The display and keypad are protected by a plastic film.
Please remove the protective film!

Inserting the battery and closing the battery cover

Warning

Use only the rechargeable batteries (→ page 72) recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ First insert the battery at the top **a**.
- ▶ Then press the battery downwards **b** until it clicks into place.



- ▶ First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

First steps

If you need to **reopen the battery cover** to connect the USB data cable or change the battery:

- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail into the notch at the bottom of the casing and pull the battery cover upwards.




To **change the battery**, place your fingernail in the cavity in the casing and pull the battery upwards.



Attaching/removing the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – using your right thumb apply pressure to the centre right of the belt clip, push the fingernail of your left index finger between the clip and the casing and lift the clip upwards.

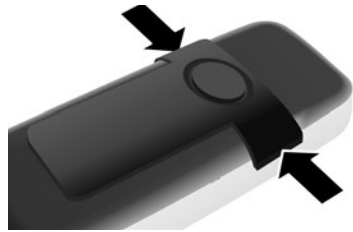

Placing the handset in the charging cradle

- ▶ Insert the mains adapter of the charging cradle into the mains socket.
- ▶ Place the handset in the charging cradle with its **display facing forward**.

The handset is registered with the base at the factory. You do not need to complete a registration. If you wish to use your handset with a different base or use further handsets with your base, you will have to register the handset manually

→ page 52.

To charge the battery, leave the handset in the charging cradle.

Please note

Only place the handset in the charging cradle that is intended for it.

First battery charge and discharge

The correct charge status can only be displayed if the battery is first fully charged and discharged.



- ▶ Place the handset in the charging cradle for **six hours**.



- ▶ Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.

Please note


- ◆ After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.



- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the time and date, open the input field via the menu → page 26.)

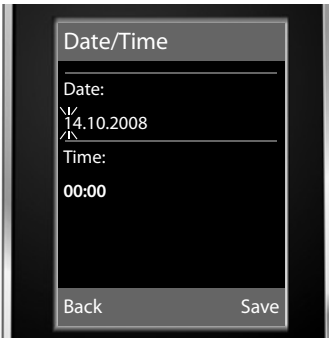


The **Date/Time** submenu is shown on the display.


- ▶ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g.

1	00	4	ghl	1	00	0	+	2	abc	0	+
0	+	8	uv								

 for 14/10/2008.

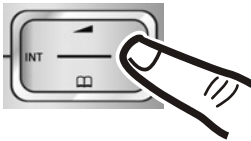

Press the **right** or **left** control key to change the input position and correct an entry.

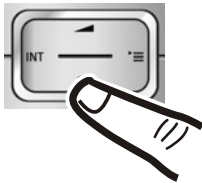


- ▶ Press **down** on the control key to switch to the time input field.

- ▶ Enter the hours and minutes as four digit numbers via the keypad, e.g.

0	+	7	pqrs	1	00	5	ikl
---	---	---	------	---	----	---	-----

 for 07:15 am. Change the input position with the control key if necessary.



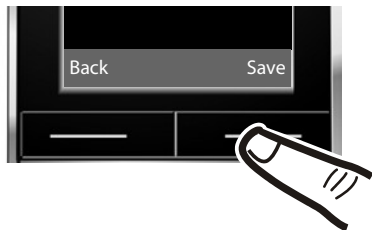

- ▶ Press the key below **Save** on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone.








- ▶ Press the key below **Back** on the display screen to return to idle status.

Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example.





The following is displayed after successful registration:

- ◆ the strength of the reception signal between base and handset:

- good to poor:    
- no reception: 

- ◆ battery charge status:

outside the charger

-  white: charged over 66 %
-  white: charged between 33 % and 66 %
-  white or red*: charged under 33 %
-  flashes red: battery almost empty (less than 10 minutes talktime)

in the charger

-     white: battery is charging

* red: older firmware version, please update the handset's firmware (→ page 75)



Your phone is now ready for use!

Please note

- ◆ The range icon is only displayed in idle status if Eco Mode+ (→ page 49) is deactivated.
- ◆ The display of the calendar in idle status can be activated or deactivated (→ page 50).

Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the back of your handset to connect the handset to a PC. To use this function, the **Gigaset QuickSync** software must be installed (→ page 74).










- ▶ Remove the belt clip (if attached) (→ page 12).
- ▶ Remove the battery cover (→ page 12).
- ▶ Connect the USB data cable to USB socket **1**.



What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.



If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" → page 18.

Information on is located here.
Setting the ring tone and volume	 page 61
Setting the handset volume	 page 61
Setting Eco Mode / Eco Mode+	 page 49
Preparing the telephone for SMS reception	 page 40
Operating the telephone on a PABX	 page 66
Registering existing Gigaset handsets to a base	 page 52
Transferring directory entries from existing Gigaset handsets to the new handset(s)	 page 34
Using Bluetooth devices	 page 57
Connecting the phone to the PC	 page 74

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 69) or contact our Customer Care team (→ page 68).

Using the phone





Control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.  for "press right on the control key" or  for "press the centre of the control key".



The control key has a number of different functions:







When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Menu for setting the handset's call volume (→ page 61).




In the main menu, in submenus and lists

-  /  Scroll up/down line by line.

In input fields

You can use the control key to move the cursor up , down , right  or left . Press and hold  or  to move the cursor word by word.

During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and speaker mode.

Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ In **idle status** the key opens the main menu.
- ◆ In **submenus, selection and input fields** the key takes on the function of the display keys **OK**, **Yes**, **Save** or **Change**.

Please note

In these instructions functions are explained using the right control key and the display keys. However, if you prefer, you can use the control key as described above.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:

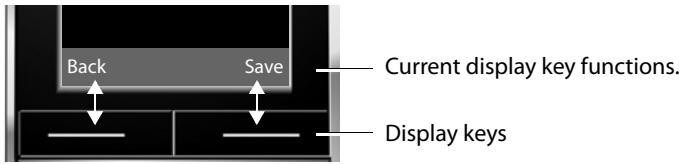

Some important display keys:

Options	Open a context-dependent menu.
OK	Confirm selection.
< C	Delete key: Delete character/word by word from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the redial list.

Keys on the keypad

	etc. Press the matching key on the handset.
	Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key **<C** (press and **hold** to delete the **word**)
- ◆ Insert characters to the left of the cursor.
- ◆ Overwrite the highlighted (flashing) character, e.g. when entering time and date.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.


Main menu (first menu level)


- ▶ When the handset is in idle status press the **right**  control key to open the main menu.

The main menu functions are shown in the display with icons. The selected function is marked by an orange circle around the symbol and the corresponding name is shown in the display header.

To access a function, i.e. to open the corresponding sub-menu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


Briefly press the display key **Back** or the end call key  to revert back to idle status.

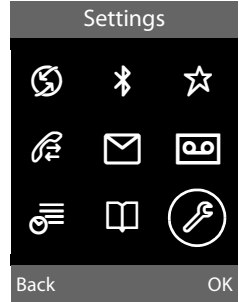



Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

Briefly press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.

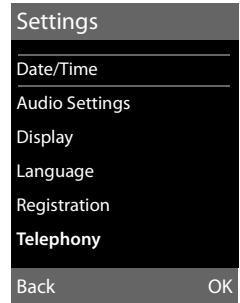

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display key **OK**, **Yes**, **Save** or **Change** will be lost

An example of the display in idle status is shown on page 16.

Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Please note


When the handset is switched on, an animation of a clock will be displayed for several seconds.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

Illustration of operating steps in the user guide


The operating steps are shown in abbreviated form.


Example:

The illustration:


 → **Settings** → **Telephony** → **Auto Answer** (☑ = on)

means:

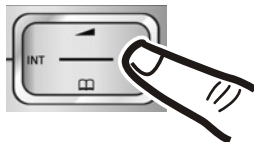


- ▶ Press **right** on the control key  to open the main menu.



- ▶ Use the right, left, down and up control key  to navigate to the **Settings** submenu.

- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Telephony** menu appears on the display.

- ▶ Press the display key **OK** to confirm your selection.




The **Auto Answer** function has already been selected.


- ▶ Press the display key **Change** to activate/deactivate the function.



Changes are effective immediately and do not have to be confirmed.

- ▶ Press the key below **Back** on the display to jump back to the previous menu level.
- or**
- Press and **hold** the end call key  to return to idle status.

Menu tree

With the telephone in **idle status**, press  (open main menu):

Select Services

Network Mailbox	→ page 31
All Calls	→ Call Divert → page 30
	→ Call Waiting → page 29
	→ Fixed Destination Call → page 31
Ringback Off	→ page 29

Bluetooth

Activation	→ page 57
Search for Headset	→ page 57
Search for DataDevice	→ page 57
Known Devices	→ page 58
Own Device	→ page 58

Additional Features

Room Monitor	→ page 55
Resource Directory	→ Screensavers → page 63
	→ Caller Pictures → page 63
	→ Sounds → page 63
	→ Capacity → page 63

Call Lists

All Calls	→ page 36
Outgoing Calls	→ page 36
Accepted Calls	→ page 36
Missed Calls	→ page 36

 **SMS**

You have activated an SMS mailbox (general or private) without a PIN

New SMS	→ page 40
Incoming	→ page 42
Draft	→ page 41

You have activated an SMS mailbox with a PIN or 2-3 mailboxes

Mailbox	New SMS	→ page 40
	Incoming	→ page 42
	Draft	→ page 41
Mailbox 1 Mailbox 2 Mailbox 3	New SMS	→ page 40
	Incoming	→ page 42
	Draft	→ page 41
SMS Service	→ page 46	
Settings	Service Centres	→ page 45
	SMS Mailboxes	→ page 44
	Notification	→ page 44

 **Answering Machine**

Play Messages	→ page 48
Network Mailbox	→ page 48

 **Organizer**

Calendar	→ page 50
Alarm Clock	→ page 52
Missed Alarms	→ page 51

 **Directory** → page 32



Settings

Date/Time	→ page 14	
Audio Settings	Call Volume	→ page 61
	Ringer Settings	→ page 61
	Advisory Tones	→ page 63
	Music on hold	→ page 65
Display	Screensaver	→ page 70
	Backlight	→ page 60
Language	→ page 60	
Registration	Register Handset	→ page 52
	De-register Handset	→ page 53
	Select Base	→ page 53
Telephony	Auto Answer	→ page 60
	Area Codes	→ page 64
	Listening In	→ page 54
	Preselection	→ page 38
	Access Code	→ page 66
	Dialling Mode	→ page 66
	Recall	→ page 66
System	Eco Mode	→ page 49
	Eco Mode+	→ page 49
	Repeater Mode	→ page 65
	System PIN	→ page 64
Reset	Handset Reset	→ page 64
	Base Reset	→ page 65

Making calls

If the backlight is deactivated (→ page 60) it is switched on by pressing any key. In this case the pressed key has no other function.

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

Or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

You are shown the duration of the call while the call is in progress.

Please note

Dialling using the directory, the call-by-call list (page 1, page 32) or the calls and redial list (page 36/page 36) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

Continuing a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 57).

Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details about your headset, see the user guide issued with it.

Ending a call



Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing speaker key.

You can accept the call by:

- ▶ Pressing the talk key.
- ▶ Pressing the speaker key.
- ▶ Press the display key **Accept**.

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 60), the handset will take a call automatically when you lift it out of the cradle.

To deactivate the ring tone, press the **Silence** display key. You can take the call as long as it is displayed on the screen.

Accepting a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 57).

Only press the talk key on the headset when the headset rings; it can take up to 5 seconds.

For further details about your headset, see the user guide issued with it.


Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has requested CLI from the network provider.

Call display with CLIP/CLI

If the caller's number is saved in your directory, the caller's name will be displayed. If you have assigned a CLIP picture (→ page 33) to the caller, this will be shown in the upper section of the display.

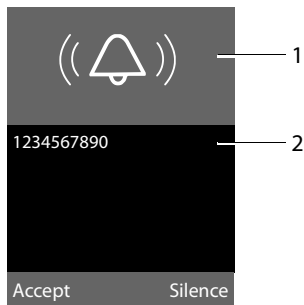

- 1 Ring tone icon or CLIP picture
- 2 Number or name of caller

The following is displayed in place of the number:



- ◆ **External**, if no number is transmitted.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Speaker talking

In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.


Activating/deactivating speaker mode

Activating while dialling

  Enter the number and press the speaker key.



- ▶ You should inform your caller before you use the speaker function so that they know someone else is listening.

Switching between earpiece and speaker mode

 Press the speaker key.

During a call, activate or deactivate speaker mode.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the speaker key  while placing the handset in the base. If speaker key  does not light up, press the key again.

For instructions on how to adjust the loud-speaker volume, → page 61.

Switch to mute

You can deactivate the microphone in your handset during an external call.

Mute Press the display key to mute the handset. The display shows **Microphone is off**.

Mute off Press the display key to reactivate the microphone.

Making calls using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ It is not possible to reprogram the network services.
- ▶ If you require assistance, please contact your network provider.

Ringback

Initiating ringback

If the number you have called is engaged, you can initiate ringback. As soon as the line of the person you called is free, your handset will ring.

You hear the busy tone.

Options → Ringback



Press the end call key.

Cancelling ringback

You can cancel ringback that has already started.

 →  → Ringback Off

Call waiting during an external call

If the function is activated during an external call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP (→ page 28) the number of the waiting caller or the corresponding directory entry is shown in the display.

Activating/deactivating call waiting

 →  → All Calls → Call Waiting

Status Activate/deactivate.

Dial Press the display key.

Accepting a waiting call

You are making an external call and hear the call waiting tone.

You have the following options:

Options → Accept Waiting call

or

(only if the phone number or name of the caller is displayed)

Accept Press the display key.

Once you have accepted the waiting call you can switch between the two callers ("toggling" → page 31) or speak to both at the same time ("conference" → page 31).

Rejecting a waiting call

You can hear the call waiting tone but do not want to speak to the caller.

Options → Reject Waiting call

The caller hears the busy tone.

Call divert (CD)

When diverting a call, the call is forwarded to another connection.

The following options are available:

- ◆ **All Calls:** Calls are diverted immediately. No more calls are signalled on your phone.
- ◆ **When Busy:** Calls are forwarded when your line is busy. Call is diverted without a call waiting tone.
- ◆ **No Answer:** Calls are diverted if no one accepts the call within several rings.

 →  → **All Calls** → **Call Divert**

▶ Change multiple line input:

When:

Select **All Calls / When Busy / No Answer**.

To Phone No.:

Enter the number to which the call is to be diverted.

Status:

Activate/deactivate call divert.

Dial

Press the display key.



After the announcement, press the end call key.

Consultation call, toggling, conference

These functions enable you to

- ◆ Call a second external caller (consultation call)
- ◆ Switch between two calls (toggling)
- ◆ Talk to two callers at the same time (conference)

Consultation call

You can call a second external caller. The first call is placed on hold.

During an external call:

Options → **External Call**

The previous call is placed on hold. The other participant hears an announcement.



Enter the second participant's telephone number.

The phone number is dialled. You are connected to the second participant.

If the caller does not answer, select the display key **End** to return to the first participant.

Please note

You can also select the second participant's phone number from the directory (→ page 35) or the call list (→ page 36).

Ending a consultation call

Options → **End Active Call**


You are reconnected to the first caller.

You can also end the consultation call by selecting the end call key. The connection is briefly interrupted and you will receive a call back. Once you have pressed the talk key you are reconnected to the first caller.

Toggleing

You can speak to both callers one at a time (toggleing).

Precondition: You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

- ▶ Use  to toggle between the participants.

The caller you are currently speaking to is marked with the  icon.

End the current call

Options → End Active Call


You are re-connected to the waiting caller.

Conference


You can speak to both participants simultaneously.

Precondition: You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

Options → Conference

You and the two other callers (both marked by the  icon) can hear and speak to each other simultaneously.

Ending a conference call

 Press the end call key to end the call with both participants.

Or:

Options → End Conference


You return to the "toggleing" status. You are reconnected to the caller with whom you started the conference call.



You can continue your conversation with the other callers.

Each of the callers can end their participation in the conference call by selecting the end call key and replacing the handset.

Further functions

Connecting without dialling

If you remove the telephone from the charging cradle or press the talk key  the stored number is automatically dialled after five seconds without having to press a button.

 →  → All Calls

→ Fixed Destination Call

- ▶ Change multiple line input:

Phone Number:

Enter the telephone number.

Status:

Activate/deactivate function.

Dial Press the display key.

Activating/deactivating the network mailbox off

The network mailbox can be activated and deactivated.

 →  → Network Mailbox

Status Activate/deactivate.

Dial Press the display key.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Redial list
- ◆ Incoming SMS message list
- ◆ Call lists
- ◆ List of missed appointments

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (→ page 34).

Directory/call-by-call list

You can save a total of 500 entries in the directory and call-by-call list.


Please note

For quick access to a number from the directory or the call-by-call list (using quick dial keys), you can assign the number to a key (→ page 59).

Directory

In the **directory**, you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail address
- ◆ Anniversaries with reminder
- ◆ VIP ring tone with VIP symbol
- ◆ CLIP pictures.

In idle status, open the directory with the  key or via the menu (→ page 26).

Length of the entries


3 numbers: each max. 32 digits

First name and surname:
each max. 16 characters

E-mail address: max. 60 characters

Call-by-call list

The **call-by-call list** is used to store the access codes for network providers ("Call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of the entries

Number: max. 32 digits

Name: max. 16 characters

Storing a number in the directory

 → **New Entry**

- ▶ Change multiple line input:

First Name: / Surname:

Enter the first and/or surname.

If you do not enter a name in either of the fields, the phone number is also saved and displayed in place of a surname.




(For instructions on how to enter text and special characters, please see

→ page 73.)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-Mail:

Enter e-mail address.

Anniversary:

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)** and **Anniversary (Time)** **Anniversary (Signal)** and select reminder type → page 35.

Caller Melody (VIP):

Mark a directory entry as a **VIP** (Very Important Person) by assigning a specific ring tone to it. VIP calls are recognised by the ring tone.

When scrolling through the directory, VIP entries are highlighted by the **VIP** symbol.

Precondition: Calling Line Identification (→ page 27).

Caller Picture:

If required, select a picture to be displayed when the caller calls (see Resource directory, page 62).

Precondition: Calling Line Identification (CLIP).

Save Press the display key.

Storing a number in the call-by-call list

 → **New Entry**

► Change multiple line input:

Name:

Enter name.

Number:

Enter the number.

Save Press the display key.

Order of directory entries



Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Selecting entries in the directory and call-by-call list

 /  Open the directory or call-by-call list.


You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been added, then it will search for the first name.

Dialling with the directory/call-by-call list

 /  →  (Select entry).


 Press the talk key. The number is dialled.

Managing directory/call-by-call entries**Viewing entries**


 /  →  (Select entry).

View Press the display key. The entry is displayed.

Options Press the display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Using the directory and lists

Editing entries

 /  →  (Select entry).


View **Edit** Press the display keys one after the other.

- ▶ Carry out changes and save.



Using other functions

 /  →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

Display Number

Save or modify a saved number and then dial with  or save as a new entry; to do so, press  after the number appears on the display.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Delete All

Delete **all** entries in the directory/call-by-call list.

Copy All

to Internal: Send the complete list to a handset (→ page 34).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

Available Memory

Display the available entries in the directory and call-by-call list (→ page 32).

Using quick dial keys

- ▶ Press and **hold** the required quick dial key (→ page 59).


Sending the directory/call-by-call list to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 /  →  (Select entry)

→ **Options** (Open menu) → **Copy Entry / Copy All** → **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Entry copied - Copy next entry?** prompt.



A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Entered anniversary reminders, pictures and sounds are not sent.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (→ page 57), you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile phone.

 →  (Select entry) → **Options** (Open menu) → **Copy Entry / Copy All** → **vCard via Bluetooth**

The list of "Known Devices" (→ page 58) is displayed.

 Select device and press **OK**.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 58) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call list or the redial list, or in an SMS to the directory.



A number is displayed:


Options → **Copy to Directory**

▶ Complete the entry → page 32.

Copying a number or e-mail address from the directory

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



▶ Depending on the operating situation, open the directory with  or .

 Select entry (→ page 33).

Saving an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

Anniversaries are automatically recorded in the calendar (→ page 50).

 →  (Select entry)

View **Edit** Press the display keys one after the other.



Scroll to the Anniversary line.



Select **On**.

▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Anniversary (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (Signal)

Select the type of signal for the reminder.



Press the display key.

Please note

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries



→  (Select entry)



Press the display keys one after the other.



Scroll to the Anniversary line.



Select **Off**.



Press the display key.

Reminder call on an anniversary

In idle status, a reminder call is shown in the display of the handset (→ page 2) and signalled with the selected ring tone.

You can:



Write an SMS.



Press the display key to acknowledge and end the reminder call.




When you are on the phone a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and that are elapsed, are entered in the **Missed Alarms** list (→ page 51).

Redial list



The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the directory or the call-by-call list, then the appropriate name will be displayed.


Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again.
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 32).

Display Number (as in the directory, page 34)

Delete Entry (as in the directory, page 34)

Delete All (as in the directory, page 34)

Incoming SMS message list

All received SMS messages are saved in the incoming message list → page 42.

Call lists


Precondition: Calling Line Identification (CLIP, page 27)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.


When in idle status, open the call lists by selecting the **Calls** display key or via the menu:







List entry

New messages are displayed at the top.

Example of list entries:

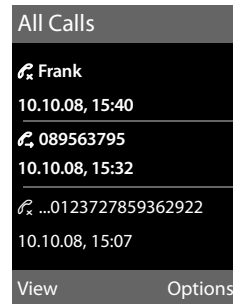

- ◆ List type (in header)
- ◆ Status of entry
Bold: New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 14)
- ◆ Type of entry:
 - Accepted calls ()
 - Missed calls ()
 - Outgoing calls ()

Press the talk key  to call the selected caller back.

Select the **View** display key to access additional information, including for example the number linked to the name

Select the **Options** display key to select the following options:

Copy to Directory

Copying a displayed number to the directory.

Delete Entry


Delete selected entry.

Delete All


Delete all entries.





When you quit the call lists, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Opening lists with the message key

You can use the message key  to open the following list selection:

- ◆ network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (→ page 48).
- ◆ Incoming SMS message list (→ page 42)
If **several** mailboxes are set up (→ page 44), several lists are displayed.
- ◆ List of missed calls
- ◆ List of missed appointments (→ page 51)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

Icon	New message...
	...on the network mailbox
	... in the missed call list
	... in the SMS list
	... in the Missed Alarms list


The number of new entries is displayed to the right of the corresponding icon.





Please note


If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

List selection

The lists displayed after pressing the message key  depend on whether there are any new messages.

- ◆  **key does not flash (no new messages):** All the lists containing messages and the network mailbox list are displayed.
- ◆  **key flashes (new messages received):** You see all the lists containing **new** messages. If only one list contains new messages, this will be opened automatically.

Lists containing new messages are at the top of the list and are marked in a bold font.

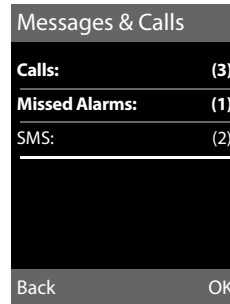

Select a list with . To open, press **OK**.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).

Options

Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (→ page 35).



Press the talk key. Both numbers are dialled.

Automatic network provider code (preselection)

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the "With Preselection" list, specify the dialling codes or the first digits of the dialling codes with which you wish the preselection number to be used.

In the "Without Preselection" list enter the exception to the "With Preselection" list.

Example:

Preselection Number	0999
With Preselection	08
Without Preselection	081 084

All numbers that start with 08 except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678	→ 07112345678
08912345678	→ 0999 08912345678
08412345678	→ 08412345678

Saving preselection numbers



→ → Telephony → Preselection → Preselection Number



Enter or change the preselection number (call-by-call number).



Save


Press the display key.


Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "with preselection" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.



 →  → **Telephony** → **Preselection**
→ **With Preselection / Without Preselection**

 Select entry.

 Enter or edit first digits of number.

Save Press the display key.

Temporarily cancelling preselection

 (press and hold) → **Options**
→ **Preselection off** →  (Select number)

Permanently deactivating preselection

 →  → **Telephony** → **Preselection**
→ **Preselection Number**

<C Press and hold the display key until the preselection number is deleted.

Save Press the display key.

SMS (text messages)

Your phone is supplied ready for sending SMS messages immediately.

Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.
- ◆ To have reception you must be registered with your service provider. This is completed automatically when you send your first SMS.

Please note

If your phone is connected to a PABX, please read → page 46.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

Please note

- ◆ For instructions on how to enter text and special characters, please see page 73.

- ◆ An SMS may contain up to 612 characters. If there are more than 160 characters, the SMS is sent as a **linked SMS** (up to 4 SMS messages with 153 characters each). The top right of the display shows how many characters are still available and which part of a linked SMS is currently being written.

Sending an SMS



Press the talk key

Or:



Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For sending SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.



Press the display key. The SMS is sent.

Please note


- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- ◆ If the memory is full, or if the SMS function on the base is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Setting input language

- ▶ You are writing an SMS.

Options Press the display key.

Select Language

Select and press **OK**. The current language is indicated by a .



Select the input language and press **Select**.

Draft message list

You can save an SMS in the draft message list, and edit and send it later.

Saving an SMS in the draft message list

- ▶ Writing an SMS (→ page 40).

Options Press the display key.

Save Select and press **OK**.

Opening the draft message list

 →  → if necessary  (Mailbox, mailbox PIN) → **Draft**


The first list entry is displayed, e.g.


Saved
10.10.08 15:07

The number will be displayed in the first line, if the entry has been saved with the phone number, i.e. when the SMS was saved from the incoming message list.

Reading or deleting SMS messages

- ▶ Open the draft message list and then:

 Select SMS.

Read Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

Options → **Delete Entry** → **OK**.

Writing/changing an SMS

- ▶ You are reading an SMS in the draft message list.

Options Open menu.

You have the following options:

Send

Send stored SMS.

Edit

Edit the text of the saved SMS and then send it (→ page 40).

Character Set

Display text in the selected character set.

Deleting draft message list

- ▶ Open the draft message list and then:



Options Open menu.



Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.

 →  → (Mailbox, mailbox PIN)
→ **New SMS**

 /  Load the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).

 Enter the SMS text.

Options Press the display key.

Send

Select and press **OK**.

E-mail

Select and press **OK**. If the number of the e-mail service is not entered (→ page 45), enter the number of the e-mail service.

Send Press the display key.

Sending SMS messages as a fax

You can also send an SMS to a fax machine.



Precondition: Your network provider supports this feature.

▶ Writing an SMS (→ page 40).

Options Press the display key.

Send Select and press **OK**.

Fax Select and press **OK**.

 /  Select number from the directory or enter directly. Enter the number with area code (even if you are in the same area).

Send Press the display key.

Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.



Please note

Each incoming SMS is signalled by a single ring (ring tone as for external calls). If you accept such a "call", the SMS will be lost. To prevent this ring, mute the first ring tone for all external calls (→ page 46).

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset SL78H handsets by the  icon in the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

 Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):

SMS: (2)

bold: new entries



normal font: read entries

If necessary select a mailbox and open list by selecting **OK** (if necessary enter mailbox PIN and confirm by pressing **OK**).

The number and date of receipt are displayed in the entry list.

0123727859362922
10.10.08 09:07

Opening the incoming message list via the SMS menu

 →  → if necessary select mailbox, enter mailbox PIN) → **Incoming**

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

▶ Open the incoming message list.

Options Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

Reading or deleting SMS messages

- ▶ Open the incoming message list, then:



Select SMS.

Read

Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

Options → **Delete Entry** → **OK**.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Changing the character set

- ▶ Reading an SMS

Options

Press the display key.

Character Set

Text is shown in the selected character set.

Replying to or forwarding text messages

- ▶ Reading an SMS

Options

Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender (→ page 40).

Edit

Edit the text in the SMS and return it to the sender (→ page 40).

Forward

Forward the SMS to another number (→ page 40).

Copy number in the directory

Copying the sender's number

- ▶ Open the incoming message list and select entry (→ page 42).

Options

→ **Copy to Directory**

- ▶ Complete the entry → page 35.

Please note

An attached mailbox identifier is added to the directory.

Copying/dialling numbers from an SMS text

- ▶ Read the SMS and scroll to the telephone number.

The digits are highlighted.



Press the display key.

Complete the entry → page 35.

Or:



Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

SMS with vCard

The vCard is an electronic business card. It is displayed by the symbol in the body of the SMS.

A vCard can include:

- ◆ Name
- ◆ Private number
- ◆ Business number
- ◆ Mobile phone number
- ◆ Birthday

Entries in a vCard can individually be saved to the directory one after the other.

Opening the vCard

- ▶ Read the SMS containing the vCard.

View

Press the display key. To return to the body of the SMS, press **Back**.



Select number.

Save

Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

- ▶ If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

Notification by SMS

You can be notified about missed calls.

Precondition: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to save the telephone number to which you wish the message to be sent.

 →  → **Settings** → **Notification**


▶ Change multiple line input:

To:

Enter the number to which the SMS should be sent.

On Missed Call:

Select **On** if you require SMS notification.

 Press the display key.

Warning

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).



Please note:


- ◆ If you operate a number of devices (bases) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").

- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the default settings of the base. This will **delete all SMS messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**

 Select mailbox, e.g. **Mailbox 2** and press **Edit**.

▶ Change multiple line input:

Activation:

Activate or deactivate mailbox.

Name:

Enter name.

Box ID:


Select mailbox ID (0–9). You can only select the available numbers.


Protection:

Activate/deactivate PIN protection.


SMS PIN:

If necessary, enter 4-digit PIN.

 Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set **Activation** to **Off**. Confirm message with  if necessary.




All SMS messages saved in this mailbox will be deleted.


Deactivating PIN protection

- ▶ Set **Protection** to **Off**.


The mailbox PIN is reset to "0000".

Changing the name of a mailbox




 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Press the display key.

 Enter new name.

 Press the display key.

Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **Box ID**, **Protection** and **SMS PIN** (→ page 44).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres



SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.


Your SMS messages are sent via the **SMS centre** that is entered as the **active send service centre**. However, you can activate any other SMS centre as the active send service centre to send a current message (→ page 45).

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (→ page 45).

Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g. **Service Centr. 1**) and press **OK**.

- ▶ Change multiple line input:

Active Send:


Select **Yes** if SMS messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS:

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Enter the number of the e-mail service.

 Press the display key.

Please note

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

Sending an SMS via another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

This setting only applies to the next SMS to be sent. After that, the setting returns to **Service Centr. 1**.

SMS services


You can have your service provider send you specific information by SMS (e.g. weather forecast or the lottery numbers). A total of up to 10 SMS services can be saved. You can obtain information about the SMS services available and charges from your service provider.

Setting up/ordering an SMS service

Ordering an SMS service


 →  → SMS Service


 Select SMS service.


 Press the display key.

Setting up an SMS service

▶ Select an empty entry, delete beforehand if necessary. Then:


 Press the display key.

 If necessary, enter code, designation and destination number.


 Press the display key.


Editing the entry of an SMS service

▶ Select the SMS service (see above). Then:

 Open menu.


Edit Entry Select and press **OK**.

 If necessary, change the code, designation or destination number.

 Press the display key.

Deleting an SMS service

▶ Select the SMS service (see above). Then:

 Open menu.

Delete Entry


Select and press **OK**.


SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded** to the extension of the PABX (**CLIP**). The CLIP evaluation of the phone number for the SMS centre takes place in your **Gigaset**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre. If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.


Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base.

Activating/deactivating first ring tone muting

 Open the main menu.



Press keys.

 **OK** Make the first ring audible.

Or:

 **OK** Mute the first ring.

Activating/deactivating SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings you have made for sending and receiving SMS messages (e.g. the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after deactivation.



Open the main menu.



Enter the digits.



Deactivate SMS function.

Or:



Activate SMS function (default setting).

SMS troubleshooting

Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed; see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.

- You have not requested the CLIP service (Calling Line Identification Presentation).
 - Ask your service provider to enable this service.
- SMS transmission has been interrupted (e.g. by a call).
 - Re-send the SMS.
- The network provider does not support this feature.
- No number or an invalid number is entered for the SMS centre set as the active send service centre.
 - Enter the number (→ page 45).

You receive an incomplete SMS.

- Your phone's memory is full.
 - Delete old SMS messages (→ page 41).
- The service provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages.

- You have changed the ID of your mailbox.
 - Give your SMS contacts your new ID or undo the change (→ page 45).
- You have not activated your mailbox.
 - Activate your mailbox (→ page 45).
- Call divert (redirecting) is activated with **When: All Calls** or for the network mailbox by selecting **All Calls**.
 - Change the call divert (→ page 30).

The SMS is played back.

- The "display call number" service is not activated.
 - Ask your service provider to activate this function (chargeable).
- Your mobile phone operator and your fixed line network SMS service provider have not agreed on a co-operation.
 - Obtain information from your fixed line network SMS service provider.
- Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e. you are not registered with the provider.
 - Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are not registered with the provider.

- Obtain information from your fixed line network SMS service provider.
- Send any SMS to automatically register your telephone to receive SMS.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox directly.

Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Network Mailbox



Enter the number for the network mailbox.

Save

Press the display key.


The setting for fast access applies to all Gigaset SL78H handsets.

Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press speaker key  if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed call list and the message key flashes (→ page 37).

ECO DECT

You are helping to protect the environment with your Gigaset.

Reduced energy consumption

By using an energy-saving power supply, your telephone consumes less power.

Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ **Handset:** The closer the handset is to the base, the lower the radiation.
- ◆ **Base station:** The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode**:

- ◆ **Eco Mode**
Reduces the radiation of the base station and handset by 80% - whether you are making a call or not. **Eco Mode** reduces the range of the base station by approx. 50%. Using **Eco Mode** always makes sense when a reduced range is sufficient.


Switching off radiation

- ◆ **Eco Mode+**
When you activate **Eco Mode+**, radiation (DECT transmission power) from the base and handset is switched off in the idle state.
This is also true when multiple handsets are used, provided the handsets support **Eco Mode+**.






Eco Mode / Eco Mode+ can be activated/deactivated independently of one another and can also be used with multiple handsets. The handset does not have to be in the base.

Activate/deactivate Eco Mode / Eco Mode+:


 → **Settings** → **System**
→ **Eco Mode / Eco Mode+**

Change Press the display key ( = on).

Status displays

Display icon	
	Reception strength: – good to poor – no reception
 white	Eco Mode deactivated
 green	Eco Mode enabled
 white	Eco Mode+ enabled (displays instead of the reception strength icon when in idle status)
 green	Eco Mode and Eco Mode+ activated

Please note

- ◆ When using **Eco Mode+** you can ensure that the range of the base is sufficient by pressing and **holding** the talk key . You hear the dial tone if the base can be reached.
- ◆ When **Eco Mode+** is enabled:
 - call setup is delayed by approx. 2 seconds.
 - handset standby time is reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** causes the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode / Eco Mode+** and repeater support (→ page 65) cancel each other out, i.e. if you use a repeater you cannot use **Eco Mode** and **Eco Mode+**.

Setting an appointment (calendar)

You can use your handset to remind yourself of up to thirty appointments. Anniversaries entered in the directory (→ page 35) are automatically recorded in the calendar.



You can select whether the graphic calendar should be displayed in idle status. To do this, select


Calendar → **Options** → **Show cal. in idle**
(☑ = display)

Press **Change** to activate/deactivate the function (☑ = on).



Saving an appointment

Precondition: The date and time have already been set (→ page 14).

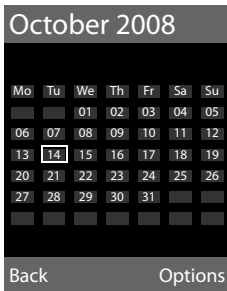 →  → **Calendar**



- ◆ The current day is selected (highlighted in orange).
- ◆ Days on which appointments have already been saved are highlighted in orange.

 /  Select the desired day in the graphic calendar.

The selected day is highlighted in orange. The current day is highlighted in white.



Press the middle of the control key.

- ◆ If appointments have already been entered, this will open the list of existing appointments on that day. Select **<New Entry>** → **OK** to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ Change multiple line input:

Appointment:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.




Press the display key.

Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

Signalling appointments and anniversaries

In idle status, an appointment reminder is signalled with the selected ring tone (→ page 61) and will sound for 60 seconds. The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time.

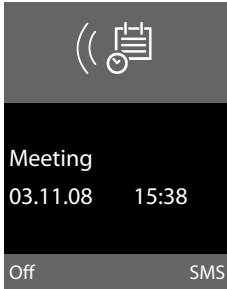

You can either deactivate or answer an appointment reminder:

Off Press the display key to deactivate the appointment reminder.



Or:

SMS Press the display key to accept the appointment reminder with an SMS.




Please note

During a call, the appointment reminder is signalled by a short tone.

Managing appointments

 →  → **Calendar**

Editing individual appointments

 /  Select a day in the graphic calendar and press the control key . (Days on which appointments have already been saved are highlighted in orange in the calendar).

 Select appointment for the day.

You have the following options:

View Select the display key and edit or confirm the entry.

Or:

Options Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments

In the monthly view:


Options → **Delete all appoint.** → **OK**


Confirm the security prompt with **Yes**. All appointments are deleted.



Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 35) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.

The symbol  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by selecting the **message key**  (→ page 37) or via the menu:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete Delete appointment

SMS Write an SMS.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Precondition: The date and time have already been set (→ page 14).

Activating/deactivating the alarm clock and setting the wake-up time

 →  → Alarm Clock

▶ Change multiple line input:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

Occurrence:

Select **Daily** or **Monday-Friday**.

Volume:

Set the volume (1–6).

Melody:

Select melody.

Save Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ring tone (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.

Off Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using several handsets

Registering handsets

You can register up to six handsets to your base.

A Gigaset SL78H handset can be registered on up to four bases.

Manually registering the Gigaset SL78H to the Gigaset SL780

You must activate manual registration of the handset on both the handset (1) and the base (2).

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. **INT 1**. If not, repeat the procedure.


1) On the handset


The handset must not be registered to a base.

Register Press the display key.

The handset is already registered to a base:

 →  → **Registration**
→ **Register Handset**

 Select base, e.g. **Base 3** and press **OK**.

 If required, enter the system PIN for the base and press **OK**.

A message displays that a search for a base that is ready for registration is being carried out.

2) On the base

Within 60 seconds press and **hold** the registration/paging key on the base (→ page 1) (approx. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

1) On the handset

Start to register the handset as described in its user guide.


2) On the base

Press and **hold** the registration/paging key on the base (→ page 1) (approx. 3 sec.).

De-registering handsets

You can de-register any other registered handset from any registered Gigaset SL78H handset.

 →  → **Registration**
→ **De-register Handset**

 Select the internal subscriber you wish to deregister and press **OK**.
(The handset you are currently using is highlighted with <).)

 Enter the current system PIN and press **Save**.


Yes Press the display key.

Locating a handset ("paging")

You can locate your handset using the base.




- ▶ **Briefly** press the registration/paging key on the base (→ page 1).
- ▶ All handsets will ring simultaneously ("paging"), even if the ring tones are deactivated.

Ending paging

- ▶ **Briefly** press the registration/paging key on the base or press the talk key  on the handset.

Changing the base



If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

 →  → **Registration** → **Select Base**
 Select one of the registered bases or **Best Base** and press **Select**.




Making internal calls

Internal calls to other handsets registered to the same base are free of charge.



Calling a specific handset


 Initiate internal call.
 Enter the number of the handset.

Or:

 Initiate internal call.
 Select handset.
 Press the talk key.


Calling all handsets ("group call")

 Initiate internal call.
 Press the star key.
or

Call All Select menu option and
 Press the talk key.

All handsets are called.



Ending a call

 Press the end call key.

Using several handsets


Transferring a call to another handset

You can transfer an external call to another handset (connect).

-  Open the list of handsets.
The external participant hears hold music if activated (→ page 65).
-  Select a handset or **Call All** and press **OK**.


When the internal participant answers:

- ▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End** to return to the external call.



When transferring a call you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an **external** call:

-  Open the list of handsets.
The external participant hears hold music if activated (→ page 65).
-  Select handset and press **OK**.
You are connected to the internal participant.


either:


End Press the display key.
You are reconnected with the external subscriber.

Or:

Conf. Press the display key.
All 3 participants are connected with each other.

Ending a conference call

 Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if Calling Line Identification is enabled.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the display key.



The call waiting tone is turned off. You remain connected with the internal participant. The ring tone can still be heard on other registered handsets.

Listening in to an external call

Precondition: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

Activating/deactivating listening in

 →  → **Telephony** → **Listening In**
Press **Change** to activate/deactivate the function (☑ = on).

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.



Press and **hold** the talk key.


You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in



Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open the list of handsets. Your own handset is indicated by ◀.



Select handset.



Open menu.

Rename



Enter name.



Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can

change the internal number of all registered handsets (1–6).



Open the list of handsets. Your own handset is indicated by ◀.



Open menu.

Assign Handset No.

Select and press **OK**.



Select number. Only numbers that have not been assigned are displayed.



Press the display key to save the input.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ring tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning!

- ◆ You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number

 →  → Room Monitor


- ▶ Change multiple line input:

Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

External number: Select the number from the directory (press display key ) or enter it directly.

Internal number: Select display key **Change** → Select handset or **Call All** if you want to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

Sensitivity:

Select noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

When the room monitor function is activated, the idle display looks as shown below:



Changing the set destination number

 →  → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 56).

Cancel/deactivate room monitor

Press the end call key  to cancel the call when the room monitor is activated.

In the idle status press the display key **Off** to deactivate the room monitor mode.

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ring tone) on the handset will remain activated until you press the display key **Off** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 56).

Using Bluetooth devices

Your Gigaset SL78H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (→ page 74).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 64).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.


Please note

- ◆ You can operate headsets on your handset that have the **headset** or **speaker profile**. If both profiles are available, the speaker profile will be used to communicate.
- ◆ It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the headset.

Activating/deactivating Bluetooth mode

→ → Activation

Press **Change** to activate or deactivate Bluetooth mode (☑ = activated).

In idle status, the  icon on the handset shows that Bluetooth mode is activated (→ page 2):

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Please note

- ◆ If you register a headset, any headset that is already registered will be overwritten.
- ◆ If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please **deactivate** this connection before you start the registration process.

→ → Search for Headset / Search for DataDevice

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

Options Press the display key.

Trust DeviceSelect and press **OK**.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

Please note

- ◆ Enter a PIN of your choice for the **data device**. Then confirm the PIN on the data device.
- ◆ Enter the preset PIN for the **headset** (usually: **0000**). For further information, please refer to the headset manufacturer's user guide.

The device is saved in the list of known devices.

Using Bluetooth devices

Cancelling/repeating current search

To cancel search:

Cancel Press the display key.

Repeat search if necessary:

Options Press the display key.

Repeat Search



Select and press **OK**.


Editing the list of known (trusted) devices

Open list

 →  → **Known Devices**

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding symbol  is shown in the header of the display.

Viewing entries

Open list →  (select entry)

View Press the display key.
Device name and address are displayed.
Back with **OK**.

Deregistering Bluetooth devices

Open list →  (select entry)

Options Press the display key.

Delete Entry Select and press **OK**.

Please note


If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

Changing the name of a Bluetooth device

Open list →  (select entry)

Options Press the display key.

Edit Name Select and press **OK**.

 Change the name.

Save Press the display key


Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject

Back Press the display key.

◆ Accept

 Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.



If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the display key.
- **No** Press the display key: use temporarily.

Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → **Own Device**

Change Press the display key




 Change the name.

Save Press the display key

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quick access to functions and numbers

You can assign a number or a function to each of the digit keys  and  to .

The left and right display keys have a function pre-selected by default. You can change the assignment (→ page 59).

The number is then dialled or the function started by simply pressing a key.

Assigning digit keys

Precondition: You have not yet assigned a number or function to the digit key.

- ▶ Press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 55).

Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 52).

Calendar

Open calendar/enter new appointment.

Bluetooth

Assign the Bluetooth menu to a key.

Redial

Display the redial list.

More Functions...

More features are available:

INT

Internal calls (→ page 53).

SMS

Assign menu for SMS functions to a key (→ page 40).

SMS Service

Assign menu for ordering SMS services to a key (→ page 46).

SMS Notification

Assign menu for activating SMS notification to a key (→ page 44).

Starting the function, dialling the number

Press and **hold** the digit key in idle status of the handset, or **briefly** press the display key.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as described when first assigning the digit key (→ page 59).

The selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

Digit key



- ▶ **Briefly** press the digit key.


Change Press the display key. The list of possible key assignments is displayed.

- ▶ Proceed as is described when first assigning the key with a quick dial (→ page 59).

Changing the display language

You can view the display texts in different languages.

 →  → **Language**


The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 

Press keys in sequence and confirm by selecting **OK**.


 Select the correct language and press the **right display key**.

Setting the display

Setting the screensaver

When in idle status, a picture, a Slideshow (all the pictures are displayed one after the other) in the Screensavers folder of the Resource Directory (→ page 62) or the time can be displayed as a screensaver. This will replace the idle status display. It may conceal the calendar, date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the **Screensaver** menu option is marked with .

 →  → **Display** → **Screensaver**

The current setting is displayed.

▶ Change multiple line input:


Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).


Selection:

Select screensaver or

View Press the display key. The active screensaver is displayed.

 Select screensaver and press **OK**.

Save Press the display key.

When the screensaver conceals the display, **briefly** press  to show the idle display.

Please note

If the **analogue clock** has been set as screensaver, the **second hand** is shown only when the handset is in the **charger**.

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. In this case the pressed key has no other function.

 →  → **Display** → **Backlight**

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select **On** or **Off**.

Out of Charger


Select **On** or **Off**.

Please note


With the **On** setting, the standby time of the handset can be significantly reduced.

Save Press the display key.

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .





 →  → **Telephony** → **Auto Answer**

Change Press display key ( = on).



Changing the speaker/earpiece volume

You can set the loudspeaker volume for speaker talking and the earpiece volume to five different levels.


In idle status:

-  Open the menu for setting the Call Volume.
-  Set the earpiece volume.
-  Scroll to the **Speaker** line.
-  Set the speaker volume.
- Save** Press display key if necessary to save the setting permanently.

Setting the volume during a call:

-  Press the control key.
-  Select volume.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.

If  is assigned with another function, e.g. toggling (→ page 31):

Options Open menu.

Volume Select and press **OK**.



Configure setting (see above).

Please note

You can also set the call volume using the menu (→ page 26).

Changing ring tones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 3 = ) and the "crescendo" ring tone (6; volume increases with each ring = .

◆ Ring tones:



You can select various ring tones, melodies or any sound from the resource directory (→ page 62).





You can set different ring tones for the following functions:

- ◆ **Extern. Calls:** for external calls
- ◆ **Intern. Calls:** for internal calls
- ◆ **Appts:** for set appointments (→ page 50)

Set the volume and melody depending on the type of signalling required.

In idle status:

 →  → **Audio Settings** → **Ringer Settings**

-  Select setting, e.g. **Extern. Calls** and press **OK**.
-  Set volume (1–6).
-  Scroll to the next line.
-  Select melody.
- Save** Press the display key to save the setting.

Additionally for external calls:

Once you have selected the melody, you can specify a time period when you do not want the telephone to ring, e.g. during the night.

Time Control:

Select **On** or **Off**.

Mute ring tone from:

Enter the start of the period in 4-digit format.

Mute ring tone until:

Enter the end of the period in 4-digit format.


Please note


During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

Activating/deactivating the ring tone


You can deactivate the ring tone on your handset before you answer a call or when the handset is in idle status; the ring tone can be deactivated permanently or just for the current call. The ring tone cannot be reactivated while an external call is in progress.

Deactivating the ring tone permanently


 Press and **hold** the star key.

The  icon appears in the display.

Reactivating the ring tone


 Press and **hold** the star key.



Deactivating the ring tone for the current call

 Press the display key.

Activating/deactivating the alert tone

In place of the ring tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ring tone.

 Press and **hold** the star key and **within 3 seconds**:

 Press the display key. A call will now be signalled by **one** short alert tone.
The  icon appears in the display.

Resource directory

The resource directory on the handset manages sounds, which you can use as ring tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling Line Identification (CLIP). The resource directory can manage the following media types:



Sound	Format
Ring tones	Standard
Monophonic	Standard
Polyphonic	Standard
Imported sounds	WMA, MP3, WAV
Picture – CLIP picture – Screensaver	BMP, JPG, GIF 240 x 120 pixels 240 x 320 pixels

The icon is displayed in front of the name in the resource directory. Various mono and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 74). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing CLIP pictures


 →  → Resource Directory
→ Screensavers / Caller Pictures /
Sounds (select entry)

Pictures:

View Press the display key. The selected picture is displayed. Switch between pictures using the  key.


If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Sounds:

The selected sound is played back immediately. Switch between the sounds using the  key.

You can set the volume during playback.

Volume Press the display key.

 Set volume.

Save Press the display key.

Deleting/renaming a picture/sound

You have selected an entry.

Options **Open menu.**

If a picture/sound cannot be deleted, these options are not available. You can select the following functions:

Delete Entry

The selected entry is deleted.

Edit Name

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Checking the memory

You can check how much memory is available for sounds and pictures.


 →  → Resource Directory
→ Capacity

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in or call list
 - **Error tone** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery low beep:** the battery requires charging.

In idle status:

 →  → Audio Settings →
Advisory Tones

▶ Change multiple line input:

Key Tones:

Select **On** or **Off**.

Confirmation:

Select **On** or **Off**.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is only activated/deactivated and only sounds during a call.

Save Press the display key.

Setting your own area code

In order to transfer phone numbers (e.g. in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.


 →  → **Telephony** → **Area Codes**


Check that the (pre)set area code is correct.


▶ Change multiple line input:

 Select/change input field.

 Navigate in the input field.

 If necessary, delete number: press the display key.

 Enter number.

 Press the display key.

Example:





Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, call-by-call list, call lists, SMS lists and the content of the resource directory

 →  → **Reset** → **Handset Reset**

 Press the display key.

Base settings



The base settings are carried out using a registered Gigaset SL78H handset.


Protecting against unauthorised access


Protect the system settings of the base with a PIN known only to you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base or when restoring the default settings.

Changing the system PIN

You can change the 4-digit system PIN set on the base (default setting: **0000**) to a 4-digit PIN known only by you.

 →  → **System** → **System PIN**

 Enter the current system PIN and press **OK**.

 Enter your new system PIN and press **OK**.

Resetting the system PIN

If you have forgotten your system PIN you can reset the base to the original code **0000**:



Disconnect the power cord from the base. Hold down the registration/paging key on the base while reconnecting the power cable to the base. Release the key after a while.

The base has now been reset and the system PIN **0000** set.

Please note

All handsets are deregistered and must be re-registered. All settings are restored to the factory settings.

Activating/deactivating music on hold


 →  → **Audio Settings**
→ **Music on hold**

Press **Change** to activate or deactivate the music on hold (= on).

Repeater support

With a repeater you can increase the range and reception strength of your base. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. Eco mode is deactivated.

 →  → **System** → **Repeater Mode**

Press **Change** to deactivate repeater mode (= on).

Please note

Repeater support and eco mode (→ page 49) cancel each other out, i.e. both functions cannot be used at the same time.

Restoring the base to the factory settings

When the settings are restored

- ◆ date and time will be retained
- ◆ handsets are still registered
- ◆ the system PIN is not reset

 →  → **Reset** → **Base Reset**



Enter the system PIN and press **OK**.

Yes


Press the display key.

Connecting the base to the PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and recall



The current setting is indicated by .

Changing the dialling mode

The following dialling modes can be selected:

- ◆ Touch tone dialling (DTMF)
- ◆ Dial pulsing (DP)



 →  → **Telephony** → **Dialling Mode**

 Select dialling mode and press **Select** ( = selected).

Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.


 →  → **Telephony** → **Recall**

 Select recall and press **Select**. ( = set value). Possible values are:
80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 400 ms, 600 ms, 800 ms.

Saving an access code (outside line code)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → **Telephony** → **Access Code**

 Enter or change access code, max. 3 digits.


Save Press the display key.


If an access code has been saved:

- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C**.

Setting pauses


Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.

 Open the main menu.

 *  #  +  5  #  1  5

Press keys.

 Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open the main menu.



Press keys.




Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Precondition: You have saved an access code (→ page 66).



Open the main menu.



Press keys.



Enter number for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

To insert a dialling pause: press and hold **R** for 2 seconds. A P appears in the display.

Switching temporarily to touch tone dialling (DTMF)

If your PABX still operates with dial pulsing (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

Precondition: You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, dial pulsing is automatically activated again.

Customer Service & Assistance

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this **User Manual** and in the **service pages of our Gigaset online portal**.

Please register your phone right after purchase on www.gigaset.com/gr/service

thus enabling us to provide you even with better service in case of questions or in case of a warranty claim. Your personal user account enables you to directly contact our customer service by email.

In our constantly updated online service on www.gigaset.com/gr/service you can find:

- ◆ Extensive information about our products
- ◆ FAQ compilations
- ◆ Keyword search to help find topics quickly
- ◆ Compatibility database: Find out which base stations and handsets can be combined.
- ◆ Product comparison: Compare the features of several products with each other.
- ◆ Downloads for user manuals and current software updates
- ◆ E-mail contact form to our customer service

Our service representatives are available on the **telephone** for more advanced questions or in-person consultation.

Service Greece 801 1000 500

(0.026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.


Questions and answers

If you have any questions about using your phone, visit us at www.gigaset.com/gr/service at any time. The table below contains a list of common problems and possible solutions.

Registration or connection problems with a Bluetooth headset.

- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (→ page 58).
- ▶ Repeat the registration process (→ page 57).

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The battery is flat.
 - ▶ Charge the battery or replace it (→ page 11).

"No Base" flashes in the display.

1. The handset is outside the range of the base.
 - ▶ Move the handset closer to the base.

The range of the base is reduced because eco mode is activated.

 - ▶ Deactivate eco mode (→ page 49) or reduce the distance between the handset and the base.
2. The base is not turned on.
 - ▶ Check the mains adapter of the base (→ page 9).

"Please register handset" flashes in the display.

Handset has not been registered with the base or has been deregistered.

- ▶ Register the handset (→ page 52).

Handset does not ring.

1. The ring tone is deactivated.
 - ▶ Activate the ring tone (→ page 62).
2. Call divert set for "All Calls".
 - ▶ Deactivate call divert (→ page 30).

You cannot hear a ring tone/dialling tone from the fixed line network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 9).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 64).

Forgotten the system PIN.

- ▶ Reset the system PIN to 0000 (→ page 64).

The other party cannot hear you.

You have pressed the **Mute** display key. The handset is "muted".

- ▶ Activate the microphone again (→ page 28).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

- ▶ The caller should ask the network provider to release Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation. Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set for dial pulsing.

- ▶ Set your PABX to touch tone dialling.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Authorisation

This device is designed for the analogic telephone connection in the Greek telephone net.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

If you require a copy of the original, visit the **website**:

www.gigaset.com/docs

CE 0682

Bluetooth Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL78H is: B013322.

Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.

- ◆ This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3, Stock, Modecenterstraße 17, 1110 Vienna, Austria.
- ◆ Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations.

However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)

- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, carry social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TÜV Süd Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 49) saves energy and is an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service.

Appendix

Caring for your telephone

Wipe the base, charging cradle and the handset with a **damp cloth** (do not use solvent or a microfiber cloth) or an **antistatic cloth**.

Never use a dry cloth as this can cause static.

Contact with liquid

If the handset should come into contact with liquid:

1. **Switch the handset off and remove the battery immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

Specifications

Recommended batteries

Technology: Lithium ion (Li-Ion):

Voltage: 3.7 V

Capacity: 750 - 830 mAh

Type: V30145-K1310-X444
V30145-K1310-X445

The handset is supplied with the recommended battery. Only an original battery may be used.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/gr/service

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx. 800
Standby time (hours)*	200/55
Talktime (hours)	14
Operating time for 1.5 hrs of calls per day (hours)**	120
Charging time in charger (hours)	3,0

* without/with display backlight

**without display backlight

(Setting the display backlight → page 60)


Base power consumption

In standby condition	approx. 1.3 W
During a call	approx. 1.5 W

General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (touch tone dialling)/DP (dial pulsing)

Pin connections on the telephone jack

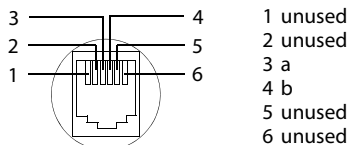

Writing and editing text

The following rules apply when writing text:

- ◆ Each key between $\boxed{\square +}$ and $\boxed{\text{wxyz} \square}$ is assigned several letters and characters.
- ◆ Control the cursor with $\boxed{\leftarrow}$ $\boxed{\rightarrow}$ $\boxed{\uparrow}$ $\boxed{\downarrow}$. Press and hold $\boxed{\leftarrow}$ or $\boxed{\rightarrow}$ to move the cursor **word by word**.
- ◆ Characters are inserted to the left of the cursor.
- ◆ Press the star key $\boxed{* \square}$ to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ Press and hold $\boxed{\square +}$ to $\boxed{\text{wxyz} \square}$ to enter digits.
- ◆ Press display key $\boxed{\leftarrow C}$ to delete the **character** to the left of the cursor. Press and hold to delete the **word** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key $\boxed{\infty \#}$ to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

* 1st letter in capitals, all others in lower case

The active mode is indicated at the top right of the screen.

Writing an SMS/name

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 no	1) 1	2) 2	1							
2 abc	a	b	c	2	ä	á	à	â	ã	ç
def 3	d	e	f	3	ë	é	è	ê		
4 ghi	g	h	i	4	ï	í	ì	î		
5 jkl	j	k	l	5						
mno 6	m	n	o	6	ö	ñ	ó	ò	ô	õ
pqrs 7	p	q	r	s	7	ß				
8 tuv	t	u	v	8	ü	ú	ù	û		
wxyz 9	w	x	y	z	9	ÿ	ý	æ	ø	å
0 +	.	,	?	!	0					

- 1) Space
- 2) Line break

Greek

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1 no	1) 1	2) 2	1									
2 abc	α	β	ά	2	a	b	c					
def 3	δ	ε	φ	έ	3	d	e	f				
4 ghi	γ	η	ι	ή	ί	ï	ĩ	4	g	h	i	
5 jkl	κ	λ	5	j	k	l						
mno 6	μ	v	o	ω	ó	ώ	6	m	n	o		
pqrs 7	π	ρ	ς	σ	ψ	7	p	q	r	s		
8 tuv	θ	τ	8	t	u	v						
wxyz 9	ζ	ξ	υ	χ	ύ	ü	ü	9	w	x	y	z
0 +	.	,	?	!	0							

- 1) Space
- 2) Line break

Additional functions via the PC interface

To enable your handset to communicate with the PC the "Gigaset QuickSync" program must be installed on your PC (free to download at www.gigaset.com/gigasetst780).

Transferring data

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth (→ page 57) or a USB data cable (→ page 16). If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle.

Please note

- ◆ If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- ◆ If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

You can

- ◆ synchronise your handset directory with Outlook,
- ◆ download CLIP pictures (.bmp) from the computer to the handset,
- ◆ download pictures (.bmp) as a screen-saver from the computer to the handset
- ◆ download sounds (ring tones) from the computer to the handset.

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls will be ignored.



Completing a firmware update

- ▶ Connect your phone to your PC using a **USB data cable** (→ page 16).
- ▶ Start the "**Gigaset QuickSync**" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select [**Settings**] → [**Device properties**] to open the [**Device**] tab
- ▶ Click on [**Firmware update**]

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). **Do not interrupt the process or remove the USB data cable.**

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key  and the speaker key  start flashing.



Once the update is complete, your phone will automatically restart.


Procedure in case of an error





If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).
- ▶ Replace the battery.
- ▶ Complete the firmware update as described.

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows:

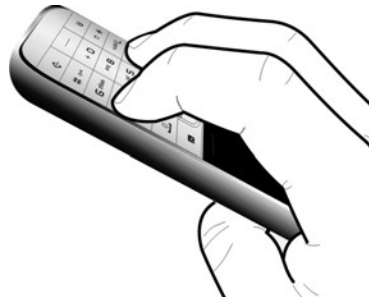- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).
- ▶ Press and hold keys  and  with the index and middle finger.



- ▶ Replace the battery.
- ▶ Release keys  and . The message key  and the speaker key  will flash alternately.
- ▶ Complete the firmware update as described.

Accessories

Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset SL78H handset

- ◆ Illuminated graphical colour display (256k colours)
- ◆ Illuminated keypad
- ◆ Speaker talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 500 entries
- ◆ CLIP picture
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface e.g. for managing directory entries, ring tones and screensavers
- ◆ Bluetooth
- ◆ Room monitor

www.gigaset.com/gigasetsl78h



Gigaset S810H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 500 entries
- ◆ Caller picture
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ PC interface, e.g., for managing directory entries, ringtones and screensavers
- ◆ Bluetooth
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasets810h



Gigaset C610H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 150 entries
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigaset610h



Gigaset SL400H handset

- ◆ Genuine metal frame and keypad
- ◆ High-quality keypad illumination
- ◆ 1.8" TFT colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 14h/230h
- ◆ Large font for call lists and directory
- ◆ Brilliant sound quality in handsfree mode:
4 handsfree settings
- ◆ Caller pictures, slide show and screensaver
(analogue and digital clock)
- ◆ Silent alert, download ringtones
- ◆ ECO DECT
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from unknown calls
- ◆ Room monitor
- ◆ SMS with up to 640 characters

www.gigaset.com/gigaset610h



Mounting the base to the wall

Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base.

www.gigaset.com/gigasetrepeater




All accessories and batteries are available from your phone retailer.

Gigaset
Original
Accessories

Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Mounting the base to the wall

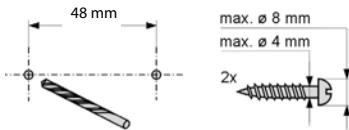

Index

A

- Access code 66
 - for a PABX 66
- Access protection 64
- Accessories 76
- Acknowledge tones 63
- Activating
 - advisory tones 63
 - appointment 50
 - call acceptance 60
 - handset 21
 - internal listening in 54
 - keypad lock 21
 - muting ring tone 46
 - network mailbox 31
 - room monitor 56
- Advisory tones 63
- Alarm clock 52
- Alert tone 62
- Anniversary 35
 - deactivating 35
 - missed 51
 - saving in directory 35
- Appointment 50
- Appointment/anniversary
 - display missed 51
- Appointments
 - activating/deactivating 51
 - deleting 51
 - managing 51
- Area code
 - setting own area code 64
- Assigning a key 59
- Assigning a number key 59
- Authorisation 70
- Automatic
 - call acceptance 27, 60
 - network provider preselection 38

B

- Base
 - changing 53
 - connecting 9
 - connecting to PABX 66
 - power consumption 73
 - restoring factory settings 65
 - setting 64
 - setting up 10
 - system PIN 64
- Battery
 - charging 1, 2, 13
 - display 1, 2
 - icon 1, 2, 16
 - inserting 11
 - recommended batteries 72
 - tone 63
- Best base 53
- Birthday, see Anniversary
- Bluetooth
 - accepting a call 27
 - activate 57
 - changing device name 58
 - deregistering devices 58
 - list of known devices 58
 - registering devices 57
 - setting own area code 64
 - transferring directory (vCard) 34

C

- Calendar 50
- Call
 - accepting 27
 - accepting (Bluetooth) 27
 - diverting (connecting) 54
 - ending 27
 - external 27
 - internal 53
 - party listening in 54
 - transferring (connecting) 55
- Call acceptance 60
- Call divert 30
- Call duration 27
- Call list 36
- Call waiting
 - accepting/rejecting 29
 - activating/deactivating 29
 - external call 29
 - internal call 54

Index

Call-by-call	32
Call-by-call list key	1
Call-by-call numbers	32, 38
Calling	
external	27
internal	53
Calling Line Identification	27
Cancelling preselection	39
Caring for your telephone	72
CD, see Call divert	
Changing	
destination number	56
device name (Bluetooth)	58
dialling mode	66
display language	60
earpiece volume	61
internal number of a handset	55
name of a handset	55
pauses	66
ring tone	61
speaker volume	61
system PIN	64
Character set	41, 43, 74
Charge status display	1, 2
CLI, CLIP	27
CLIP picture	28, 33, 62
Conference	31
Conference (internal)	54
Confirmation tone	63
Connecting, base to PABX	66
Consultation call	30
Consultation call (internal)	54
Control key	1, 18
Correcting incorrect entries	19
Customer Care	68
Customer Service & Assistance	68

D

Deactivating	
advisory tones	63
appointment	50
call acceptance	60
handset	21
internal listening in	54
keypad lock	21
muting ring tone	46
network mailbox	31
room monitor	56

Delete key	19
Deleting	
characters	19
Deregistering (handset)	53
Deregistering devices (Bluetooth)	58
Destination number (room monitor)	56
Dial pulsing	66
Dialling	
call-by-call list	33
directory	33
mode	66
pause	67
quick dial	59
using quick dial	34
Directory	32
copying number from text	35
managing entries	33
opening	18
order of entries	33
saving anniversary	35
saving entry	32
saving the sender's number (SMS)	43
sending entry/list to handset	34
transferring a vCard (Bluetooth)	34
using to enter numbers	35
Display	
backlight	60
changing display language	60
in idle status	20
memory (directory/call-by-call)	34
memory (resource directory)	63
missed appointments/anniversaries	51
network mailbox message	48
number (CLI/CLIP)	27
screensaver	60
setting	60
Display keys	1, 19
assigning	59
Disposal	71
DP (dial pulsing)	66
Draft message list (SMS)	41

E

Earpiece mode	28
Earpiece volume	61
ECO DECT	49
Eco Mode	49
Eco Mode+	49

- E-mail address 41
 - copying from the directory 35
- End call key 1, 27
- Ending, call 27
- Entry
 - saving (network mailbox) 48
 - saving, changing (preselection) 39
 - selecting from directory 33
- Environment 71
- Error tone 63
- External call
 - call waiting 29
- F**
- Fast access
 - network mailbox 48
- Fax (SMS) 42
- Firmware Update 75
- G**
- General troubleshooting 69
- Group call 53
- Guarantee Certificate 70
- H**
- Handset
 - activating/deactivating 21
 - advisory tones 63
 - changing internal number 55
 - changing name 55
 - changing the number 55
 - changing to a different base 53
 - changing to best reception 53
 - contact with liquid 72
 - de-registering 52, 53
 - display backlight 60
 - display language 60
 - diverting a call 54
 - idle status 20
 - list 18
 - locating 53
 - muting 28
 - paging 53
 - registering 52
 - registering to a different base 53
 - restoring to factory settings 64
 - screensaver 60
 - setting 59
 - setting up 11
 - speaker volume 61
 - using room monitor 55
 - using several 52
- Handset operating time
 - in room monitor mode 56
- Hash key 1, 21
- Headset (Bluetooth) 57
- Hearing aids 6
- Help 69
- I**
- Icon
 - alarm clock 52
 - battery 16
 - display 19
 - for new messages 37
 - keypad lock 21
 - new SMS 42
 - ring tone 62
- Idle status (display) 20
- Idle status, returning to 20
- Incoming message list (SMS) 42
- Incorrect input (correction) 19
- Input language (SMS) 41
- Installing, base 10
- Internal
 - conference 54
 - consulting 54
 - listening in 54
 - making calls 53
- Internal call 53
 - call waiting 54
- K**
- Key 1 (fast access) 1
- Keypad lock 21
- Keys
 - call-by-call list 1
 - control key 1, 18
 - delete key 19
 - display keys 1, 19
 - end call key 1, 27
 - fast access 1
 - hash key 1, 21
 - message key 1
 - on/off key 1
 - quick dial 34
 - recall key 1
 - speaker key 1
 - star key 1
 - talk key 1, 27

Index

- L**
- Language, display 60
 - Last number redial 36
 - Linking, see SMS
 - List 32
 - call list 36
 - call-by-call list 32
 - handsets 18
 - known devices (Bluetooth) 58
 - missed calls 36
 - network mailbox 36
 - SMS draft message list 41
 - SMS incoming message list 42
 - SMS list 36
 - Listening in to a call 54
 - Locating, handset 53
 - Lock
 - activating/deactivating keypad lock .. 21
- M**
- Mailbox ID, see SMS
 - Mailboxes, see SMS
 - Mains adapter 6
 - Making calls
 - accepting a call 27
 - cost-effective calls 38
 - external 27
 - internal 53
 - Manual last number redial 36
 - Medical appliances 6
 - Memory
 - directory/call-by-call 34
 - resource directory 63
 - Menu
 - end tone 63
 - opening 18
 - overview 24
 - prompting 20
 - Message key 1
 - open list 42
 - opening lists 37
 - Microphone 1
 - Missed
 - anniversary 51
 - appointment 51
 - calls 36
 - Music on hold 65
 - Muting
 - first ring 46
 - handset 28
- N**
- Name of a handset 55
 - Network mailbox 48
 - Network provider preselection,
 - automatic 38
 - Network services 29
 - Notification by SMS 44
 - Number
 - as destination for room monitor 56
 - copying from an SMS text 43
 - copying from directory 35
 - copying to directory 35
 - displaying caller's number (CLIP) 27
 - entering network mailbox number ... 48
 - entering with directory 35
 - fixed destination call 31
 - saving in the directory 32
- O**
- On/Off key 1
 - Order in directory 33
- P**
- PABX
 - connecting base 66
 - pauses 66
 - saving access code 66
 - setting dialling mode 66
 - setting recall 66
 - SMS 46
 - switching to touch tone dialling 67
 - Pack contents 8
 - Paging 53
 - Paging key 1
 - Pause
 - after access code 67
 - after line seizure 66
 - after recall key 67
 - PC Interface 74
 - Picture
 - deleting 63
 - renaming 63

Picture CLIP..... 33, 62
 PIN change
 system PIN 64
 Pin connections 73
 Power consumption (base)..... 73
 Preselection 38
 cancelling 39
 Protecting the phone against access 64

Q

Questions and answers 69
 Quick dial..... 32, 59

R

Range 10
 Recall 66
 Recall key..... 1, 67
 Reception booster, see Repeater
 Redirect, see Call divert
 Registering (handset)..... 52
 Registering devices (Bluetooth) 57
 Registration key.....1
 Reminder call 35
 Repeater 65
 Resource directory 62
 Ring tone
 changing..... 61
 muting..... 46
 setting volume..... 61
 Ringback 29
 Room monitor 55

S

Saving (access code)..... 66
 Screensaver..... 60
 Searching in directory 33
 Sending
 directory entry to handset 34
 Sensitivity (room monitor) 56
 Setting
 date 14, 26
 screensaver..... 60
 time 14, 26
 Setting up the handset 11

Signal tone, see Advisory tones
 SMS..... 40
 active send service centre 45
 changing mailbox..... 45
 deleting 41, 43
 diverting 43
 draft message list 41
 incoming message list..... 42
 info services 46
 input language 41
 linked 40
 list 36
 mailbox ID..... 44
 mailboxes 44
 notification by SMS 44
 PIN protection 44
 reading 41, 43
 receiving 42
 replying to or diverting 43
 saving number..... 43
 self help with error messages 47
 sending as a fax..... 42
 sending to a personal mailbox 45
 sending to an e-mail address..... 41
 troubleshooting 47
 vCard 43
 writing 40, 73

SMS centre
 changing number..... 45
 setting 45

SMS to PABXs 46
 Snooze mode..... 52
 Sound, see Ring tone
 Speaker
 earpiece volume 61
 key 1
 talking 28

Special functions..... 66
 Specifications..... 72
 Star key 1
 System settings 64

Index

T

- Talk key 1, 27
- Telephone jack, pin connections. 73
- Text message, see SMS
- Three-party conference..... 31
- Toggling. 31
- Touch tone dialling. 66, 67
- Troubleshooting (SMS) 47

U

- Update 75
- USB connection 16

V

- vCard (SMS). 43
- Viewing the network mailbox message . 48
- VIP (directory entry) 33
- Volume
 - earpiece..... 61
 - earpiece volume 61
 - handset speaker volume..... 61
 - loudspeaker 61
 - ring tone 61
 - setting 61

W

- Warning tone, see Advisory tones
- Writing (SMS) 40
- Writing and editing text 73

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

This user guide is made from 100% recycled paper.